

Introduction

CS520 is another premium high power full range co-axial ceiling speaker with metal back enclosure, suitable for requirement of quality sound reproduction with adjustable power taps. It comes with aluminum grille for rust prevention, thus suitable for installation in high humid or salty environment.

It is suitable for speech and background music playback in areas, such as:


- Hotel corridors / lobbies
- Offices
- Shopping centres for general paging and pipe in music
- Public areas

Guide to Installation

1


Cut the ceiling hole

Cut a circular hole at the ceiling board (Plaster Ceiling or Ceiling Board) according to the size below:

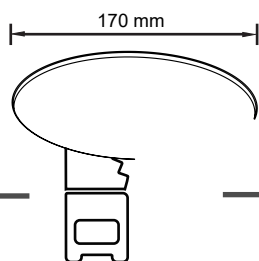


2

Dismantling speaker grille

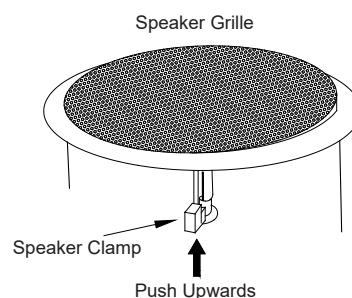


4

Mounting the speaker to the ceiling hole

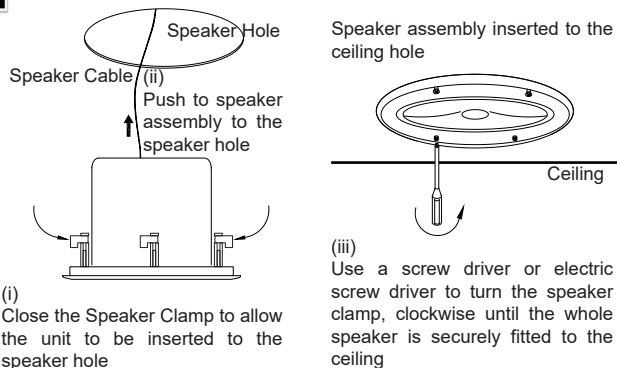

3

Connecting the speaker cables and adjust the rotary switch

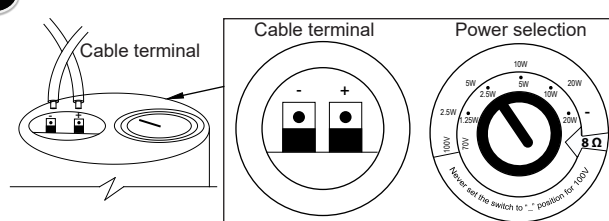


Connect the speaker cable from the ceiling to the connectors provided. Ensure polarity of cable is correctly terminated to the terminals. Pre-select the power output required to suit the installation area before mounting the speaker to the ceiling.

5


Installing the grille to speaker

The final step shall be attaching the speaker grille to the speaker assembly. The grille should be fitted without glue, this would enable easy future retraction if the need arises.

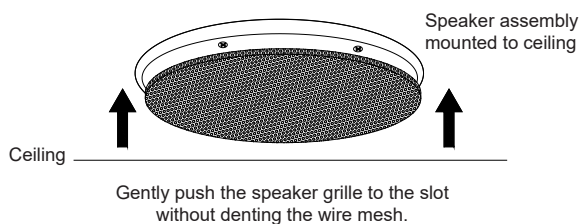

6

Installation complete

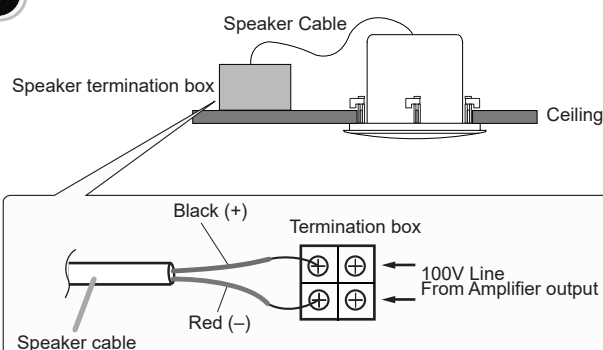

Introduction

CS630 is another premium full range ceiling speaker with metal back enclosure, suitable for requirement of quality sound reproduction with adjustable power taps. With its controlled dispersion angle, it is suitable for installation at high ceiling areas.

It is suitable for speech and background music playback in areas, such as:

- Hotel corridors / lobbies
- Offices
- Shopping centres for general paging and pipe in music
- Public areas




Guide to Installation

1


Cut the ceiling hole

Cut a circular hole at the ceiling board (Plaster Ceiling or Ceiling Board) according to the size below:

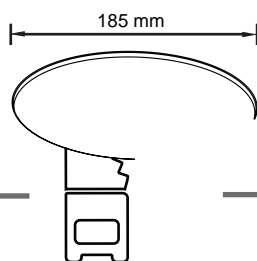


2

Dismantling speaker grille

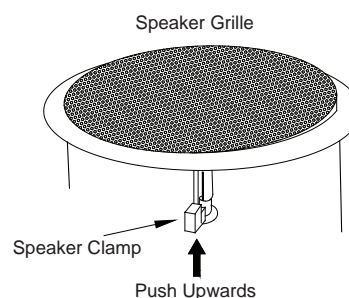


4

Mounting the speaker to the ceiling hole

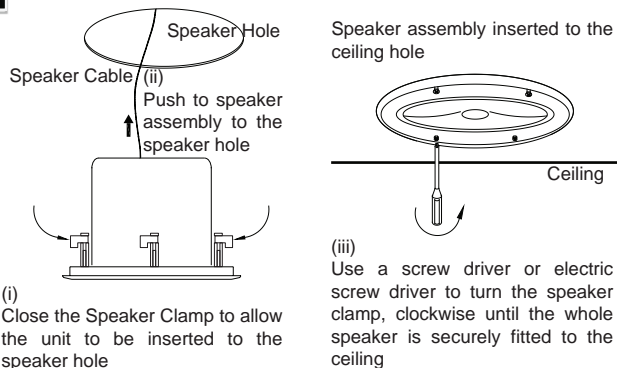

3

Connecting the speaker cables and adjust the rotary switch

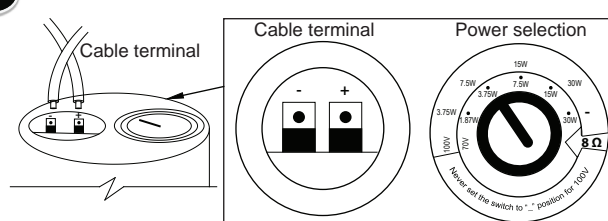


Connect the speaker cable from the ceiling to the connectors provided. Ensure polarity of cable is correctly terminated to the terminals. Pre-select the power output required to suit the installation area before mounting the speaker to the ceiling.

5

Installing the grille to speaker

The final step shall be attaching the speaker grille to the speaker assembly. The grille should be fitted without glue, this would enable easy future retraction if the need arises.

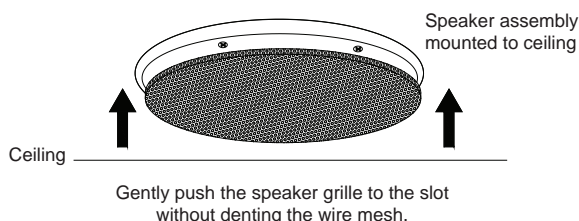

6

Installation complete

