



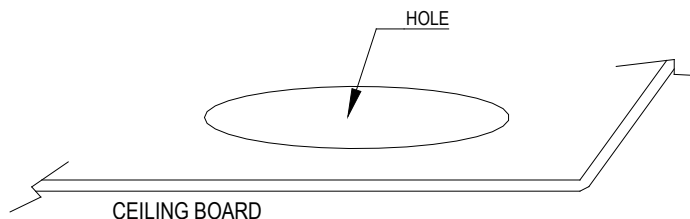


STEP 1 : CUT HOLE AT THE CEILING ACCORDING TO THE SPEAKER TYPE
HOLE DIAMETER : 140 MM FOR CS610
175 MM FOR CS810

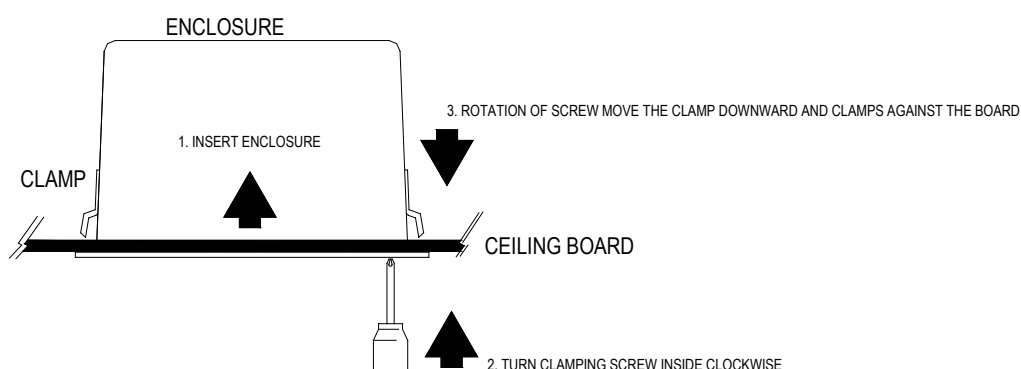


STEP 2 : INSTALL THE SPEAKER ENCLOSURE TO THE HOLE BY SCREWING THE CLAMPS CLOCKWISE
THE ENCLOSURE WILL BE TIGHTENED AGAINST THE BOARD



STEP 3 : CABLE TERMINATION
INSERT CABLE VIA ENCLOSURE HOLE AND TERMINATE TO THE SPEAKER ACCORDING TO THE REQUIRED WATTAGE

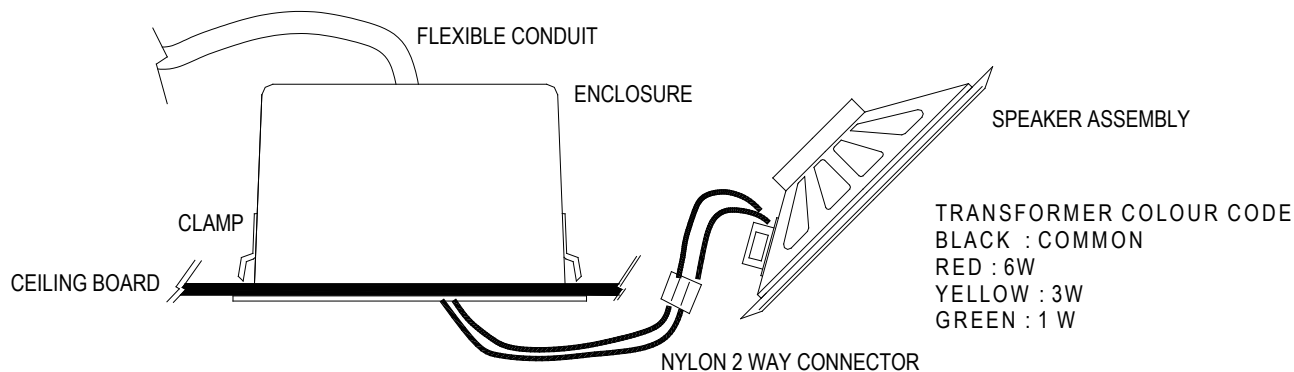

STEP 4 : INSTALL THE SPEAKER AND BAFFLE ASSEMBLY TO THE ENCLOSURE
THE SPEAKER ASSEMBLY WOULD LOCKED TO THE ENCLOSURE TO COMPLETE THE ASSEMBLY PROCESS

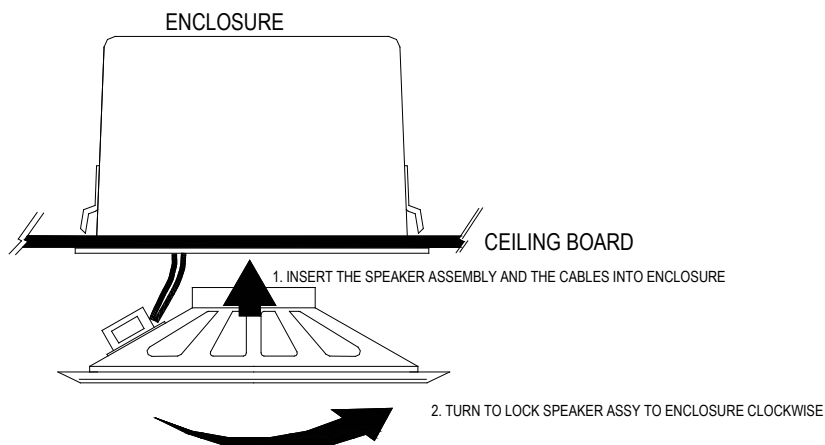

CUT OUT TEMPLATE FOR CEILING SPEAKERS

CS510

CS610

