




ACTUAL POSITION AFTER MOUNTING

SCREW HOLE

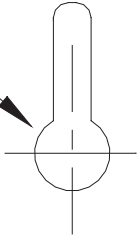

FOR VERTICAL MOUNTING

PLACE SPEAKER THIS WAY UP
SLOT MOUNTING HOLE TO SCREW
AND PUSH THIS WAY DOWN




FOR HORIZONTAL MOUNTING :

PLACE SPEAKER THIS WAY UP
SLOT MOUNTING HOLE TO SCREW
AND PUSH THIS WAY



SCREW HOLE

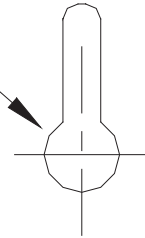

ACTUAL POSITION AFTER MOUNTING